


ALIM TMS-II-IP

Ref : J-DA-019

BACKUP POWER CONNECTED

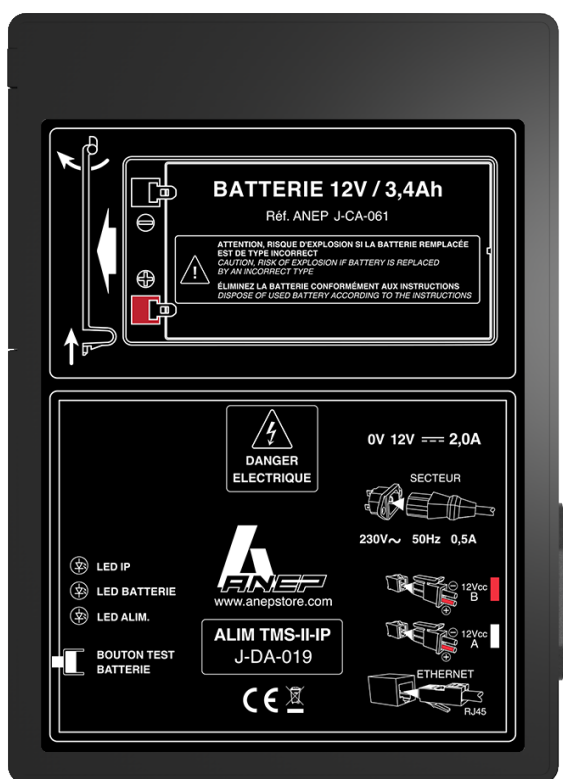

GENERAL WARNINGS

SAFETY INSTRUCTIONS

Pay close attention to the warnings contained in this section as they provide important guidelines for achieving a safe installation, for correct use and maintenance of the product.

- **ALIM TMS II-IP** is a DC backup power supply designed to be connected to the 230 Vac public distribution network.
- It ensures the continuity of equipment service in the event of a power outage. The emergency function is built into the product.
- An easily accessible two-pole disconnecting device must be provided and mounted upstream: curve C or D (recommended rating 1A).
- In order to avoid any risk of electric shock, any intervention must be carried out.
- The intervention must only be carried out by authorized personnel.
- Equipment intended for use in a technical room.
- Horizontal or vertical mounting.
- Comply with thermal and mechanical limits.
- In the event of prolonged storage or disconnection, disconnect the battery mounted inside of the box.



WARNING

Risk of explosion if battery is replaced by an incorrect type.
Dispose of used batteries according to the instructions.



Electrical equipment must be compulsorily recycled according to Directive n°2012/19/EU of 04/07/12 relating to waste electrical equipment and Electronic (WEEE)

SUMMARY

GENERAL WARNINGS	2
Safety instructions	2
SPECIFICATIONS	4
DESCRIPTION	5
Dimensions	5
BATTERY CONNECTION BEFORE MAINS	6
PROXY	7
INSTALLATION	8
Tabletop mounting	8
Rack mounting	9
Wall mounting	10
Support Dimensions	11
CONNECTION	12
Supplied cables	12
12Vdc outputs	12
Ethernet	12
Mains 230Vac	12
Battery	13
Fuses	14
WORKING	15
TEST button / Diagram	16
RESET button	17
LEDS	15
OPERATING MODE	18
ONE425 mode	18
Stand-alone mode (DHCP)	19
Stand-alone mode (IP statique)	19
HTML ADMINISTRATION	20
PC connection	20
HTML login page	21
Description of the fields and buttons	22
Values of the factory configuration	24
IP COMMUNICATION	25
SYSLOG	25
TROUBLESHOOTING / FAQ	27

SPECIFICATIONS

ENVIRONMENTAL

Operating temperatures : **10°C...35°C**

Storage temperatures : **0°C...85°C**

Relative humidity in operation : **20% ...95% à 30°C**

INPUT ELECTRICAL

- Network voltage 196 to 255 Vac - Frequency: 50 Hz - Class I
- Neutral systems: TT, TN, IT - Primary current @ 230 Vac: 0.5 A
- Display by LED (green) of the presence of the network: **Power**

OUTPUT ELECTRICAL

- 2 outputs 12 Vcc (2A total Max.)

BATTERY

- Built-in lead battery 12 V, 3.4 A/h
- Local battery test using the battery test button: **Test**
- Display of the result of the battery test by an indicator: **Battery OK**

Pressing the button activates the battery test phase (flashing of the battery OK indicator). After one minute, if the indicator lights up, the battery is functional.



Réf. ANEP
J-CA-061



DESCRIPTION

ALIM TMS II-IP is a safeguarded and controlled DC power supply, intended for be connected to the 230 Vac public distribution network.

Main features :

- Ensures the continuity of equipment service in the event of a power outage.
- Permanently checks the presence of 230 Vac and the state of load of the battery and communicates the information via an IP network to a serverSyslog.
- Automatically retrieves the configuration from an ANEP server desired.
- Complies with EN60950 – EN61000-3 – EN61000-4 – EN55014 standards.



DIMENSIONS

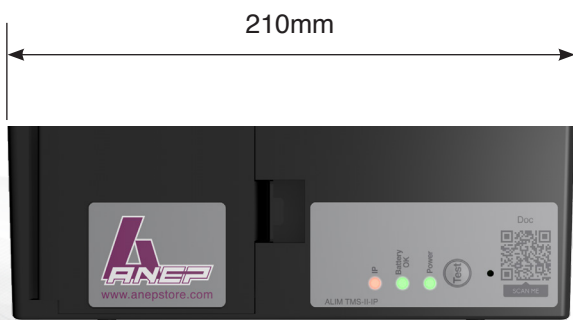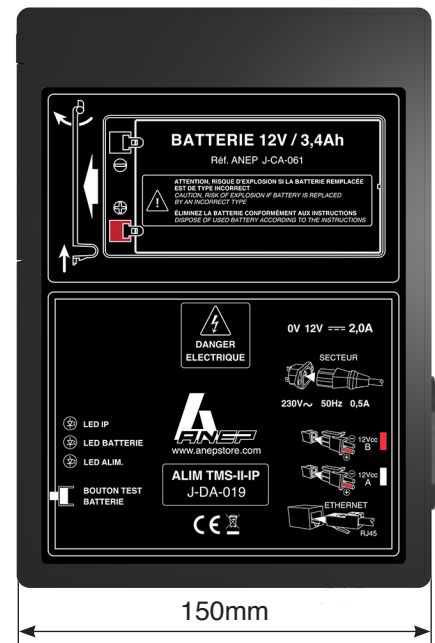


BATTERY CONNECTION BEFORE MAINS

ATTENTION! Before starting any work, please disconnect the 230 Vac power cable.

- 1** Open the front cover to remove the battery.

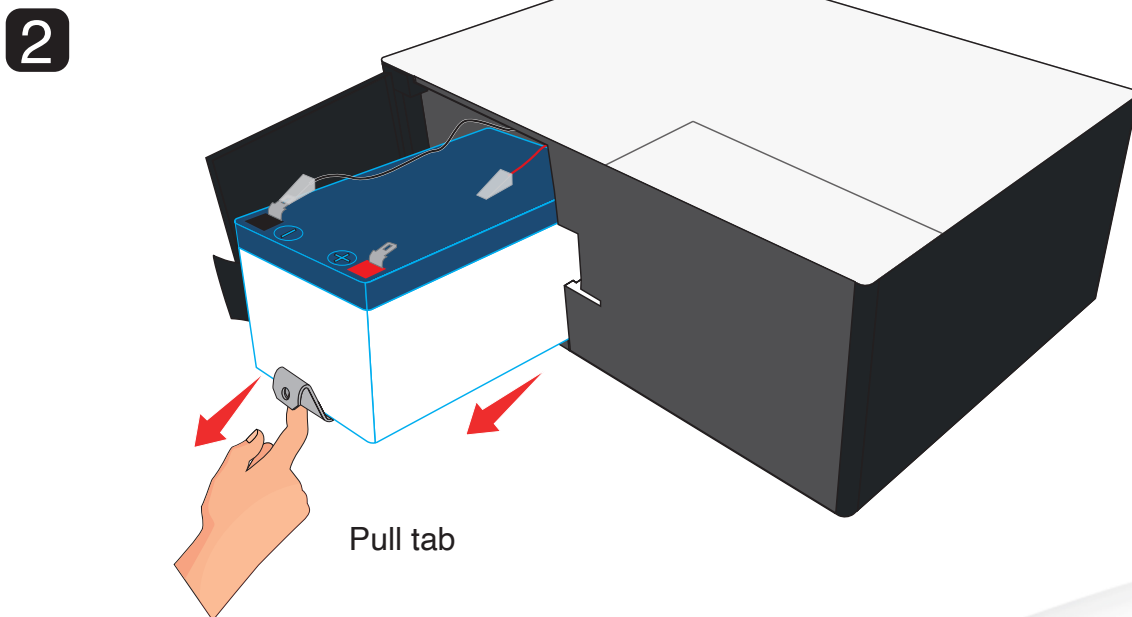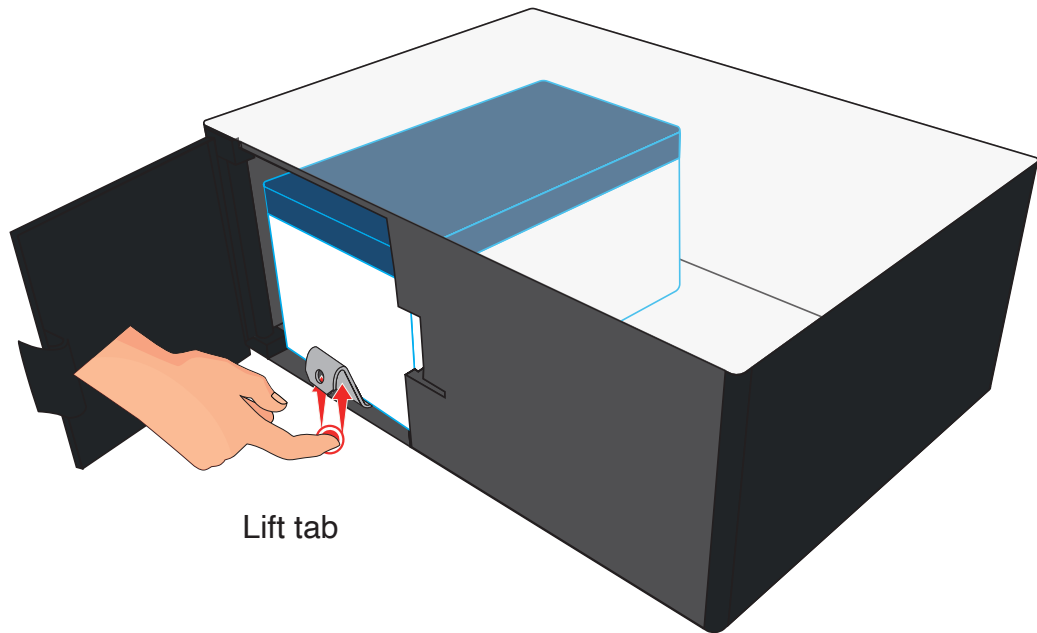


3 Connect red cable to red terminal (+)

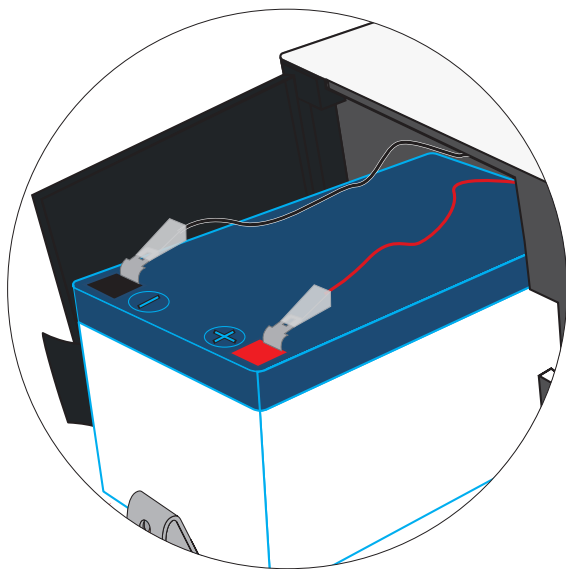

BE CAREFUL! not to invert the red (+) and black (-) terminals.

4 Store battery, close cover, connect to 230 Vac mains supply.

5 LED status

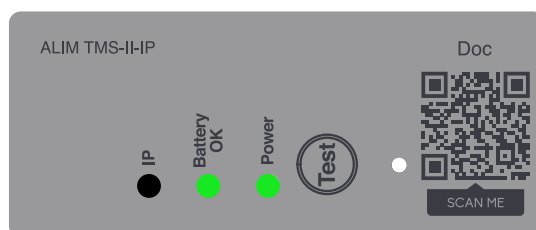

"POWER" and "BATTERY OK" LEDs are steady green.

If the "BATTERY OK" LED is not lit, press the TEST button; after one second it will light up green.

If "BATTERY OK" LED is red, replace or charge battery.

Note: If the ALIM TMS-II-IP is to be disconnected from the 230 Vac mains supply for a period of time (storage, maintenance, etc.), the battery (red terminal) must also be disconnected to prevent total discharge.

PROXY


If the power supply is connected to a network managed by a Proxy, please contact the site network administrator to set up the Proxy.

INSTALLATION

TABLETOP MOUNTING




Optional Rack Support (Id. ANEP : J-AA-001)

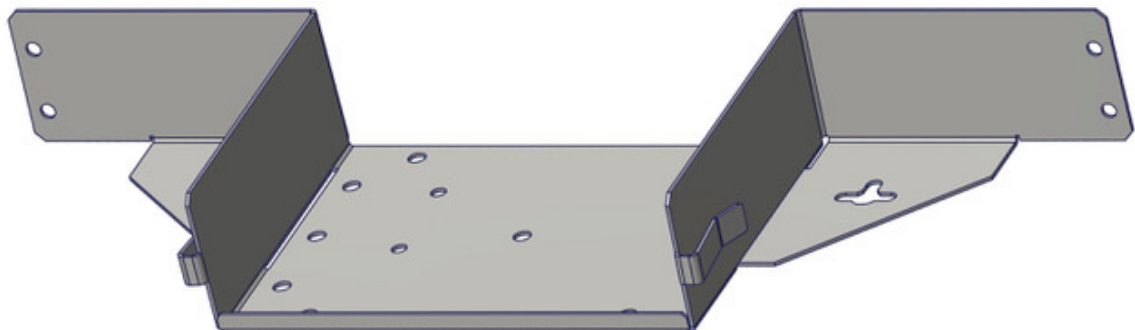

INSTALLATION

RACK MOUNTING


As an option, the support (Id. **ANEP: J-AA-001**) allows the TMS-II-IP PSU to be installed in a standard 19" inch wide computer rack, allow for a height of 2U.

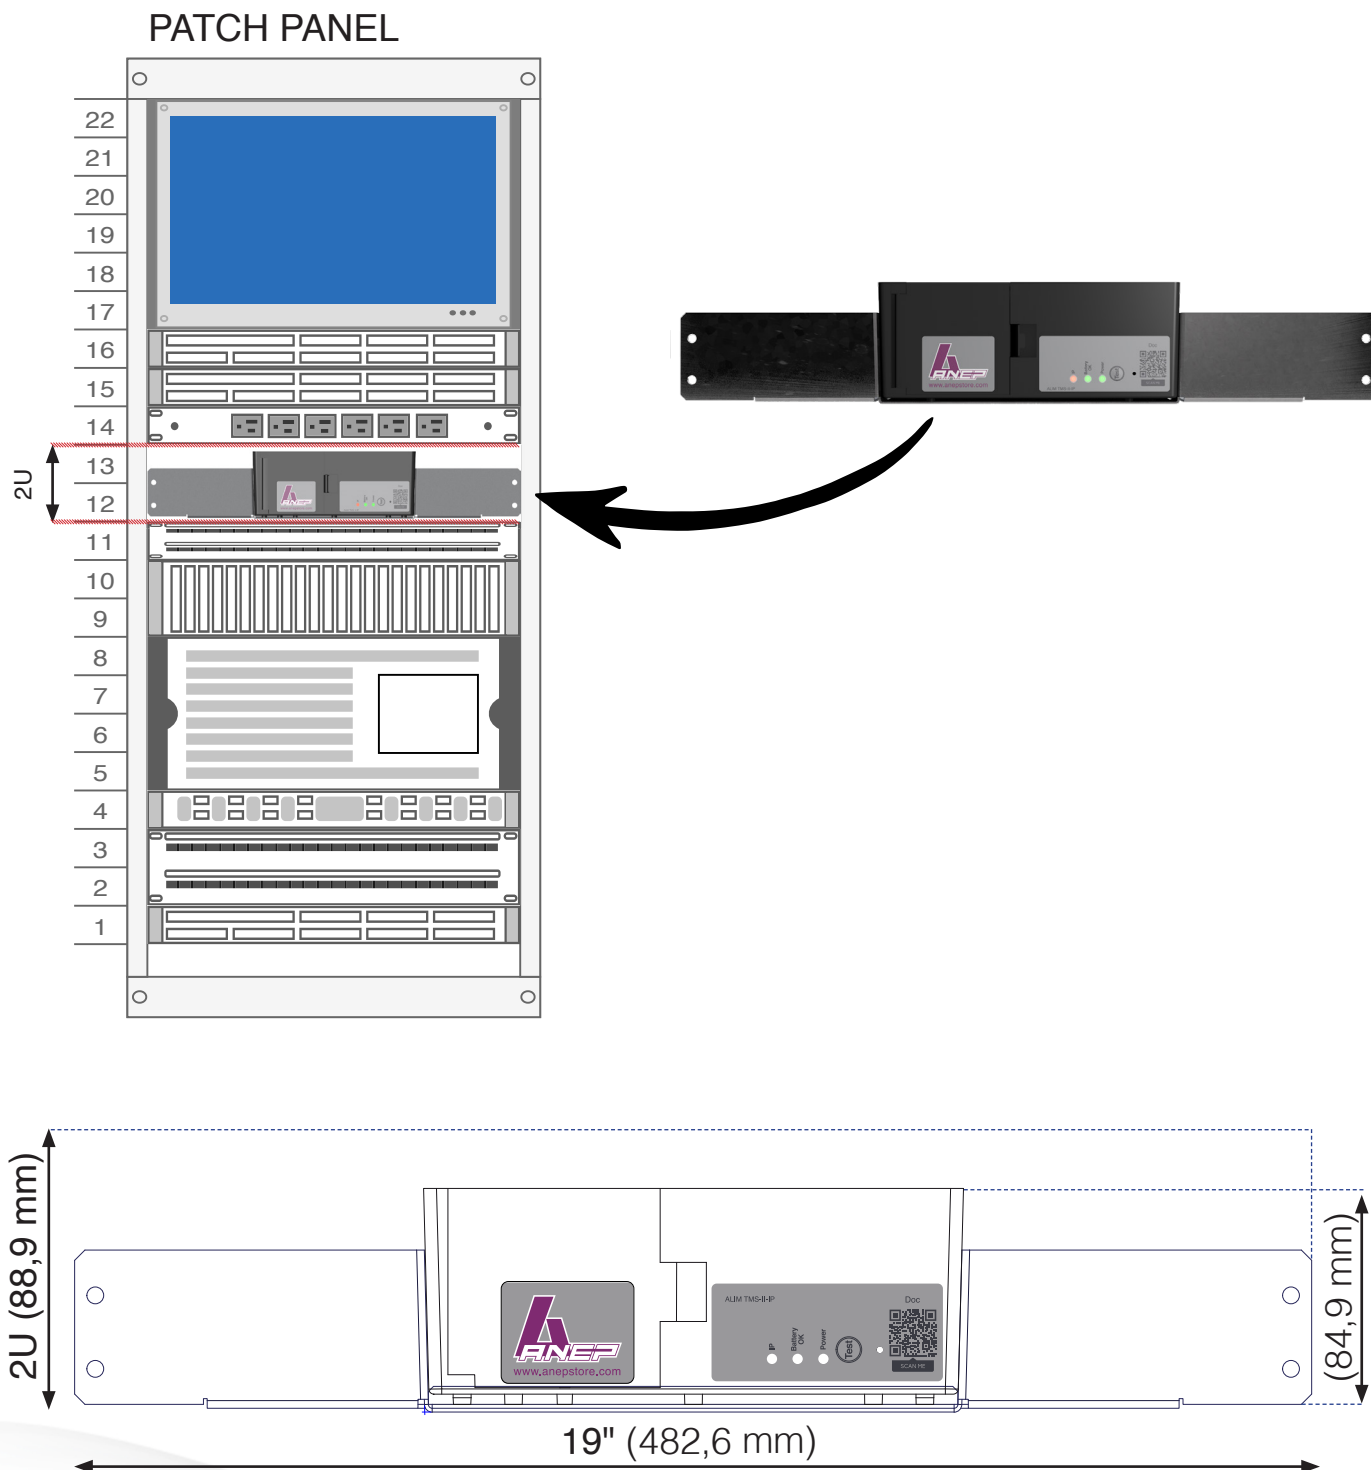

INSTALLATION


WALL MOUNTING

As an option, the support (Id. ANEP : J-AA-001) allows wall installation

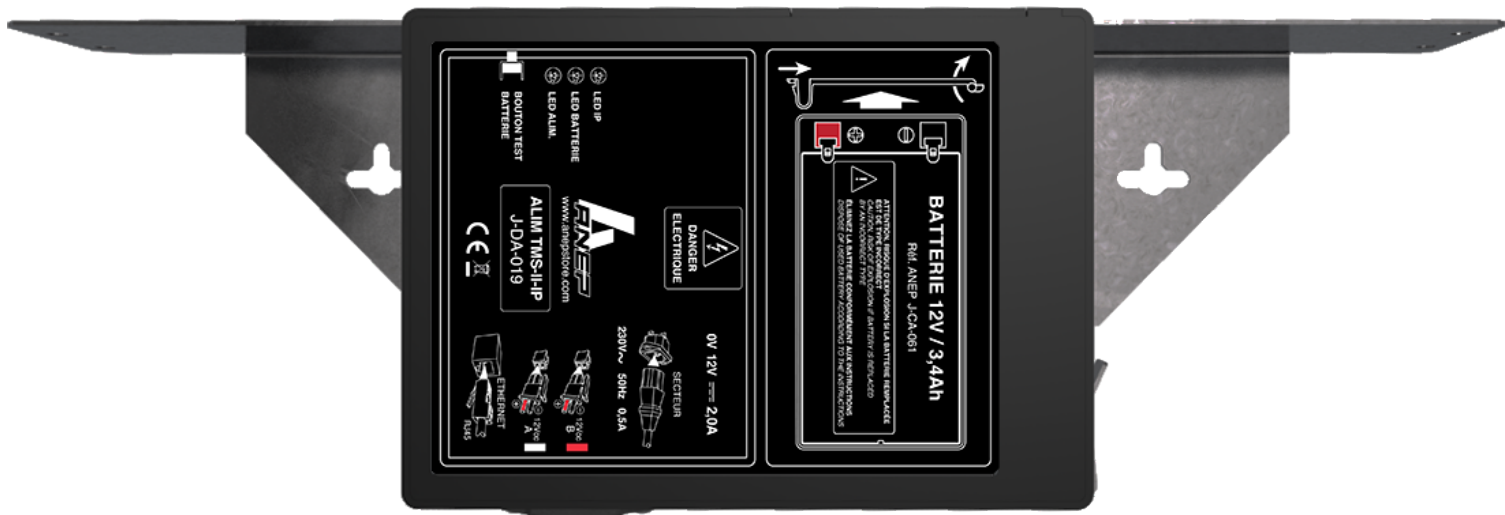

INSTALLATION

SUPPORT DIMENSION (Id. ANEP : J-AA-001)

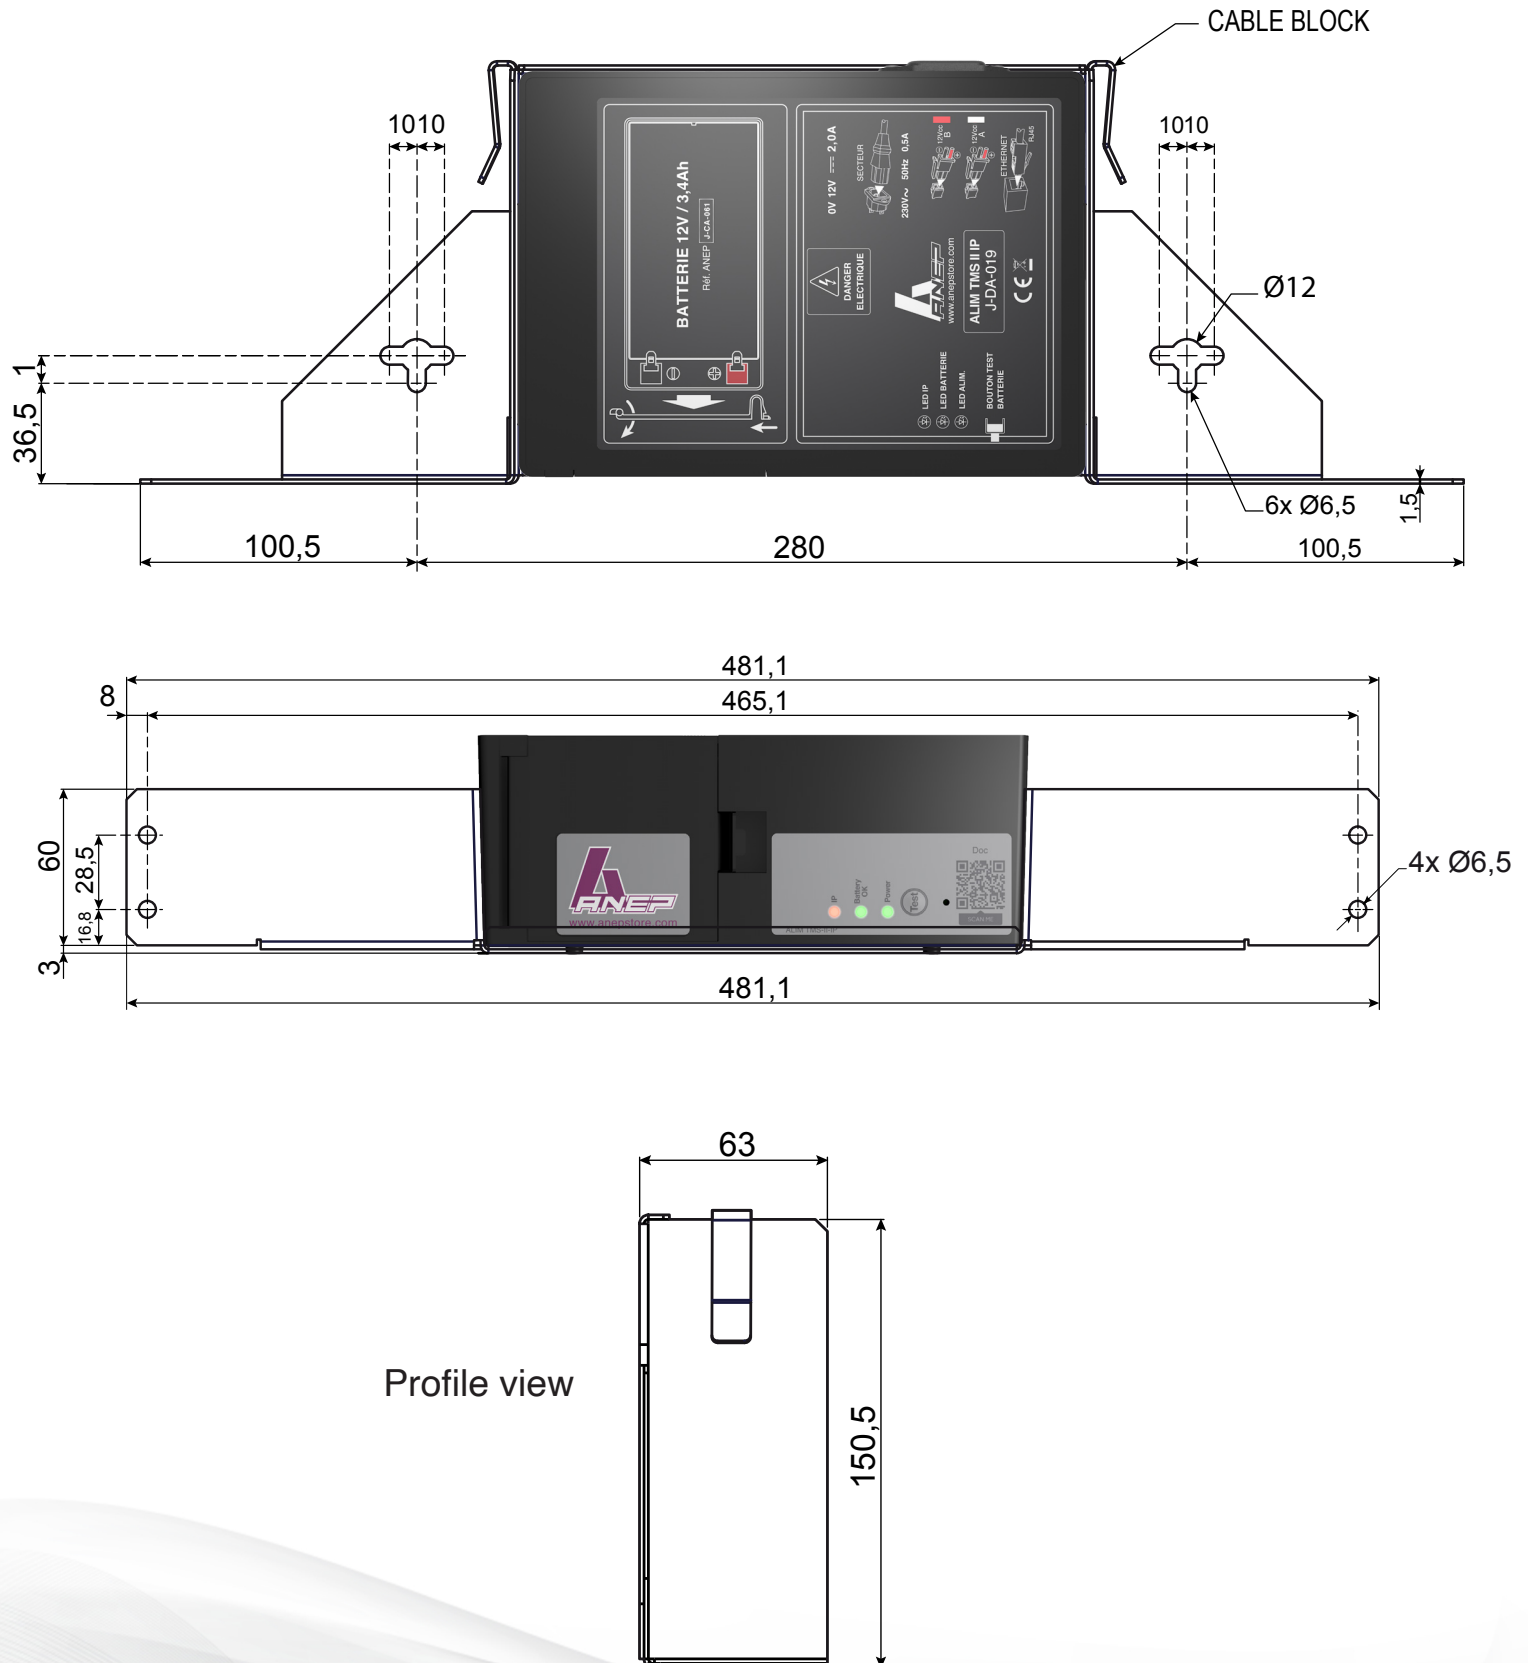

CONNECTION

CABLES SUPPLIED

OUTPUT CABLE 12V, x3, 2M

 
Power plug 1.50m DC type ø5.5 x 2.5mm MALE



Power plug 1.50m DC type ø5.5 x 2.1mm MALE




Power plug 1.50m DC type ø5.5 x 2.1mm MALE




Please note that the equipment to be connected must be adapted to the following polarity



 ETHERNET CABLE, CAT 5e, RJ45, 2m




MAINS CABLE 230V, 2m

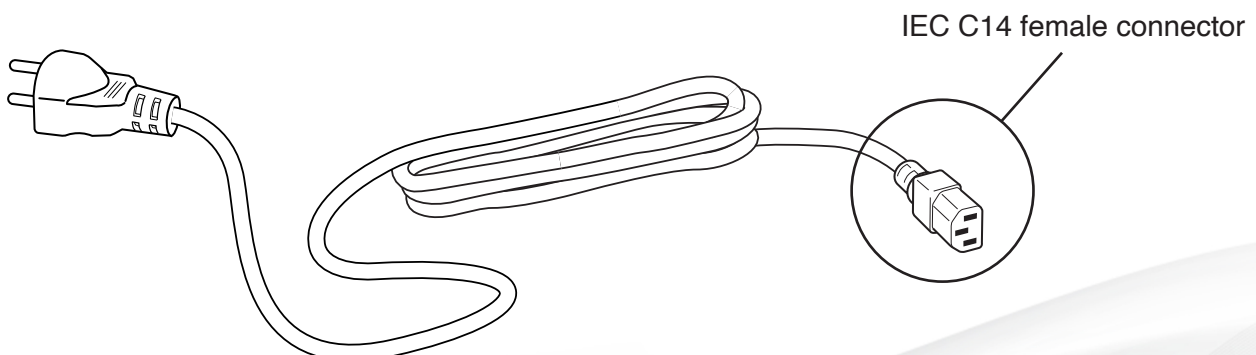

CONNECTION

FUSES

Before any intervention, please make sure to unplug the power cable 230 Vac and the battery.

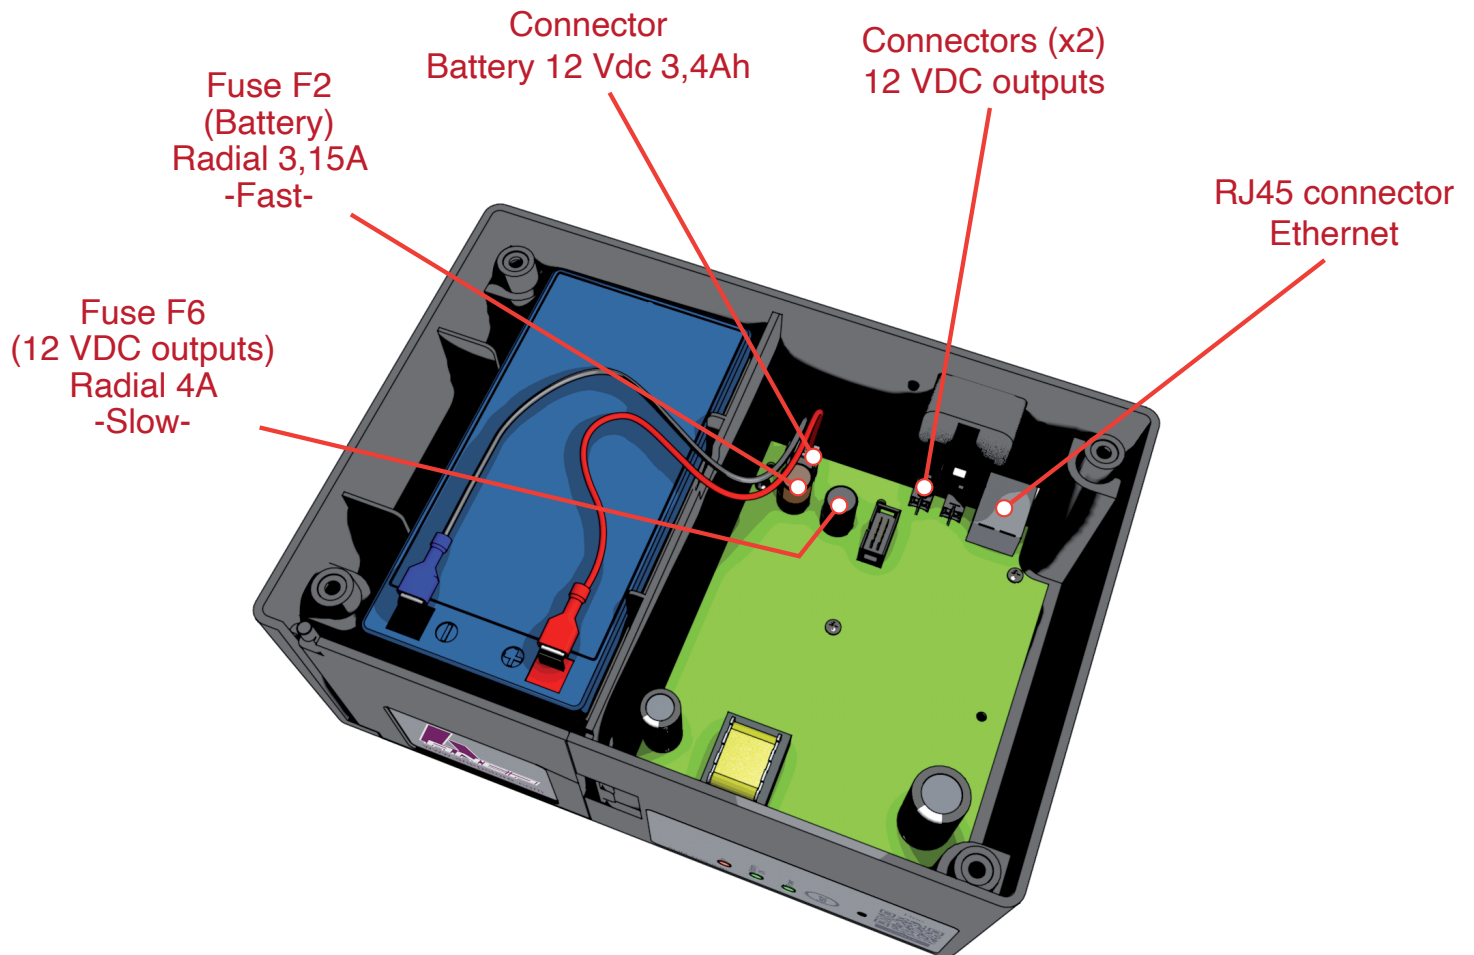

WORKING

FRONT FACE



IP-LEDs

Color	State	Designation
Red	Fixed	Steady DHCP mode, no DHCP response
	Slow Flashing	Long reboot, static mode, waiting for action
Orange	Fixed	Load config, DHCP mode, One425
	Fast Flashing	Load config, DHCP mode, Standalone
	Slow Flashing	Load configuration, static mode
Green	Fixed	Ping serveur syslog, Transmission syslog ok
	Fast Flashing	Config provisioning not recovered
	Slow Flashing	Config provisioning recovered

LED Battery OK

Off		Battery out or missing, or fuse F2 out
Green	Flashing	Voltage <12Vdc, autonomy 1h not assured
Green	Fixed	Battery OK


LED POWER

Green	Off	No 230 Vac power supply
Green	Flashing	Test in progress (see diagram "Battery TEST")
Green	Fixed	Power ON

WORKING

TEST BUTTON (Diagram)

Pressing the button activates the battery test phase (flashing of the **LED Battery OK**). After one minute if the indicator lights up fixed, the battery is functional.

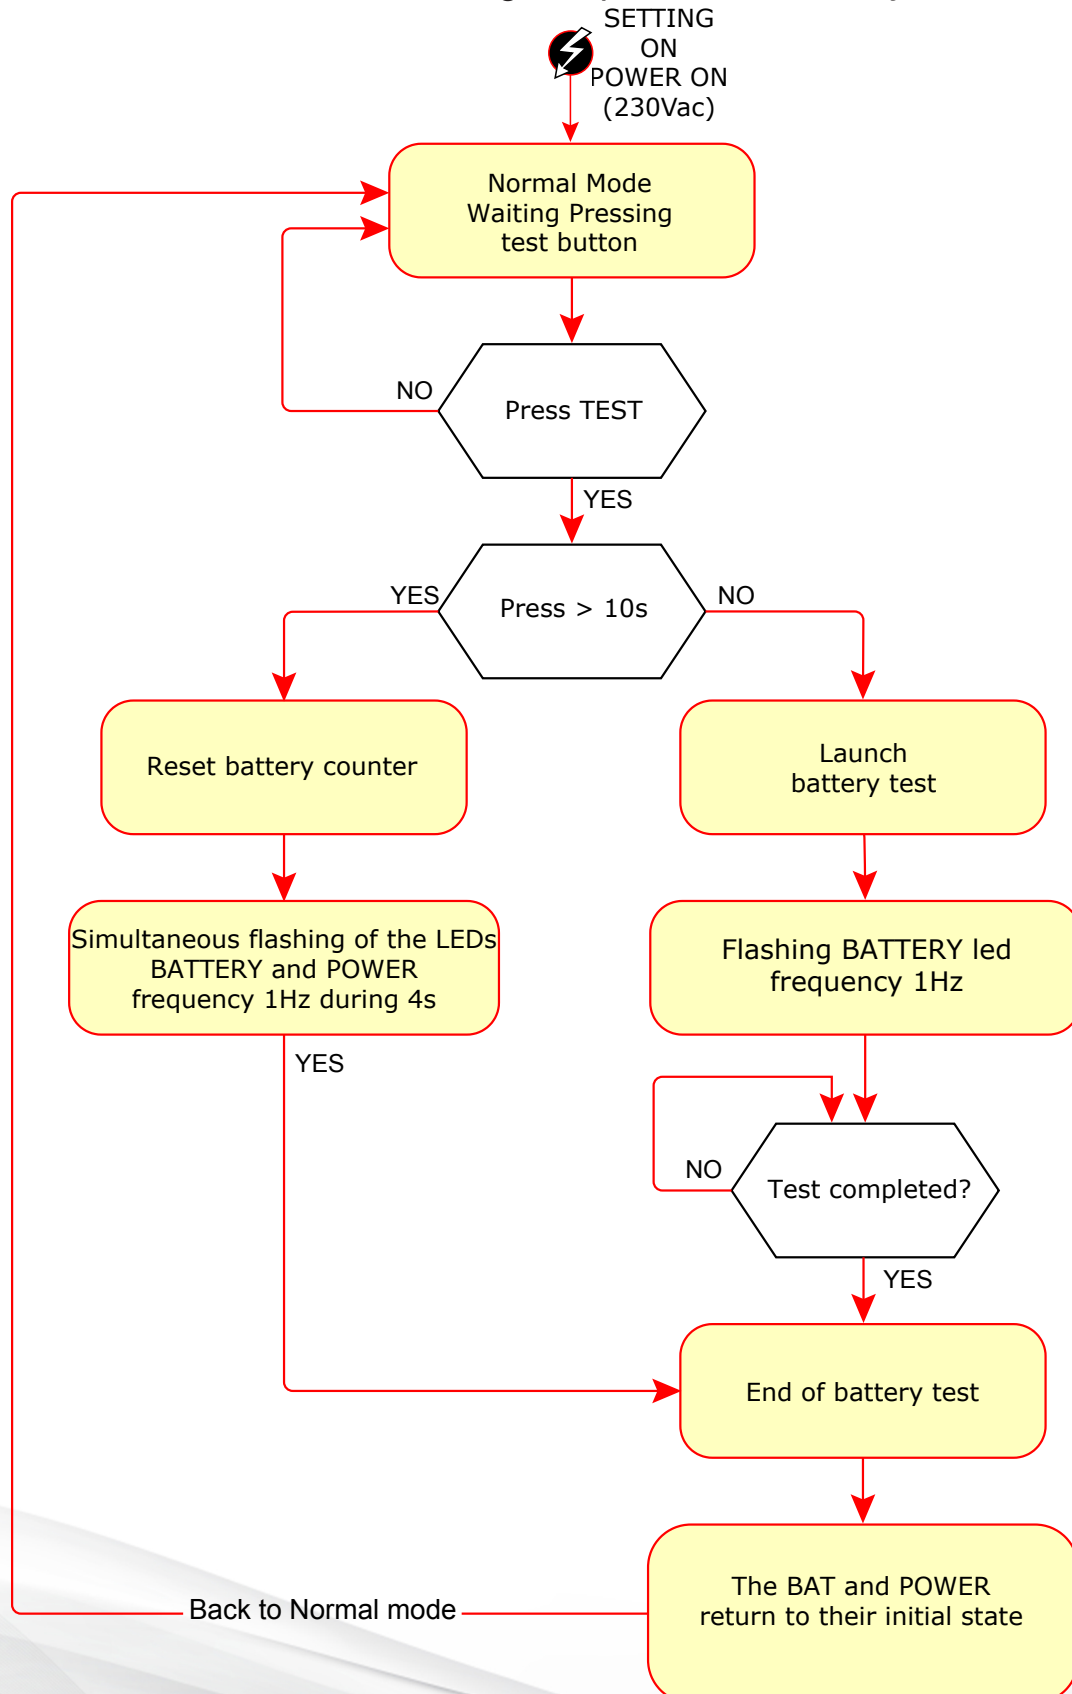

WORKING

RESET BUTTON

a. SHORT PRESS 1s (RESTART) :

- Simultaneous flashing Battery OK and Power (green LEDs) frequency 3Hz for 2s.
- Attempt of DHCP Mode for the automatic detection of an ONE425 router (Otherwise Static Mode enabled, IP Address, Mask and Default Gateway)

b. LONG PRESS 5s (FACTORY RESET):


- Slow flashing red IP LED.
- Loading the factory configuration.
- Password reset.
- IP Address, Mask and Default Gateway
- Wait for user action, see HTML administration page

OPERATING MODE

DHCP MODE WITH ONE425 ROUTER:

An ONE425 router connected to the TMS-II-IP ALIM takes on the role of DHCP server and Syslog and sends the following instructions at the start of communication with power supply.


- **Option 2:** Time offset (TimeOffset)
- **Option 54:** Server identifier (server identifier)
- **Option 58:** Renewal interval value (renewal time value)

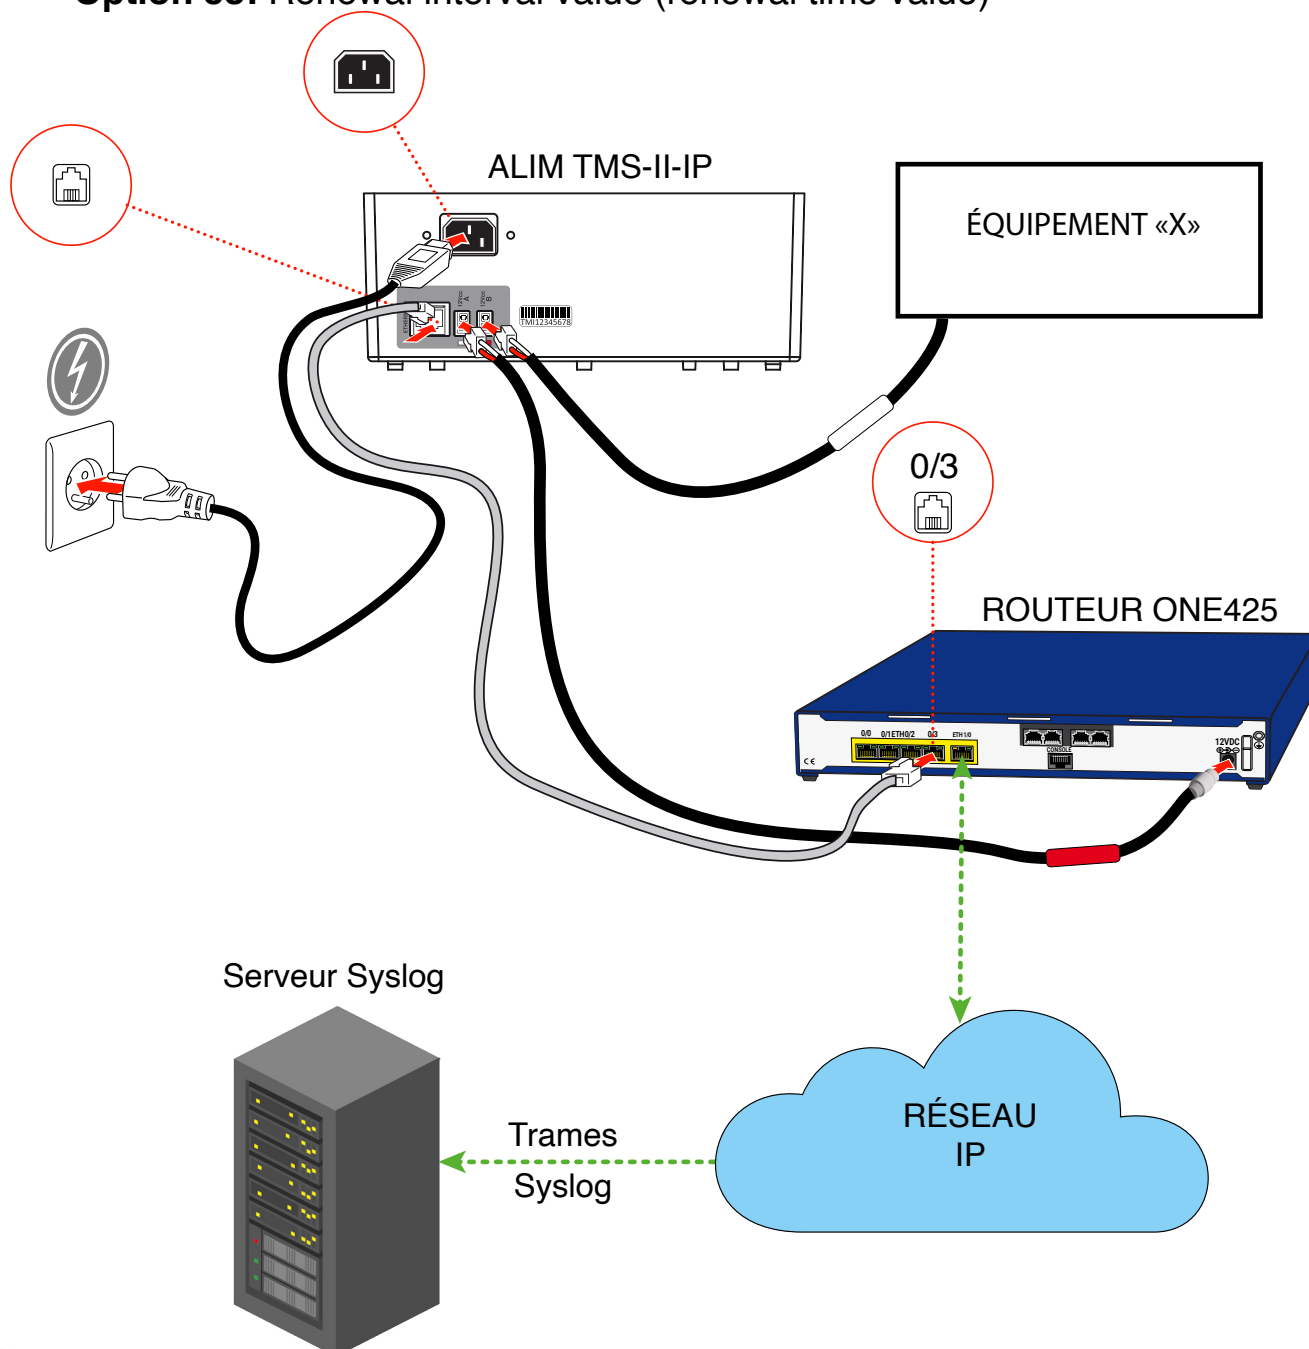

- figure 1 -

OPERATING MODE

STAND-ALONE MODE (without ONE425 router)

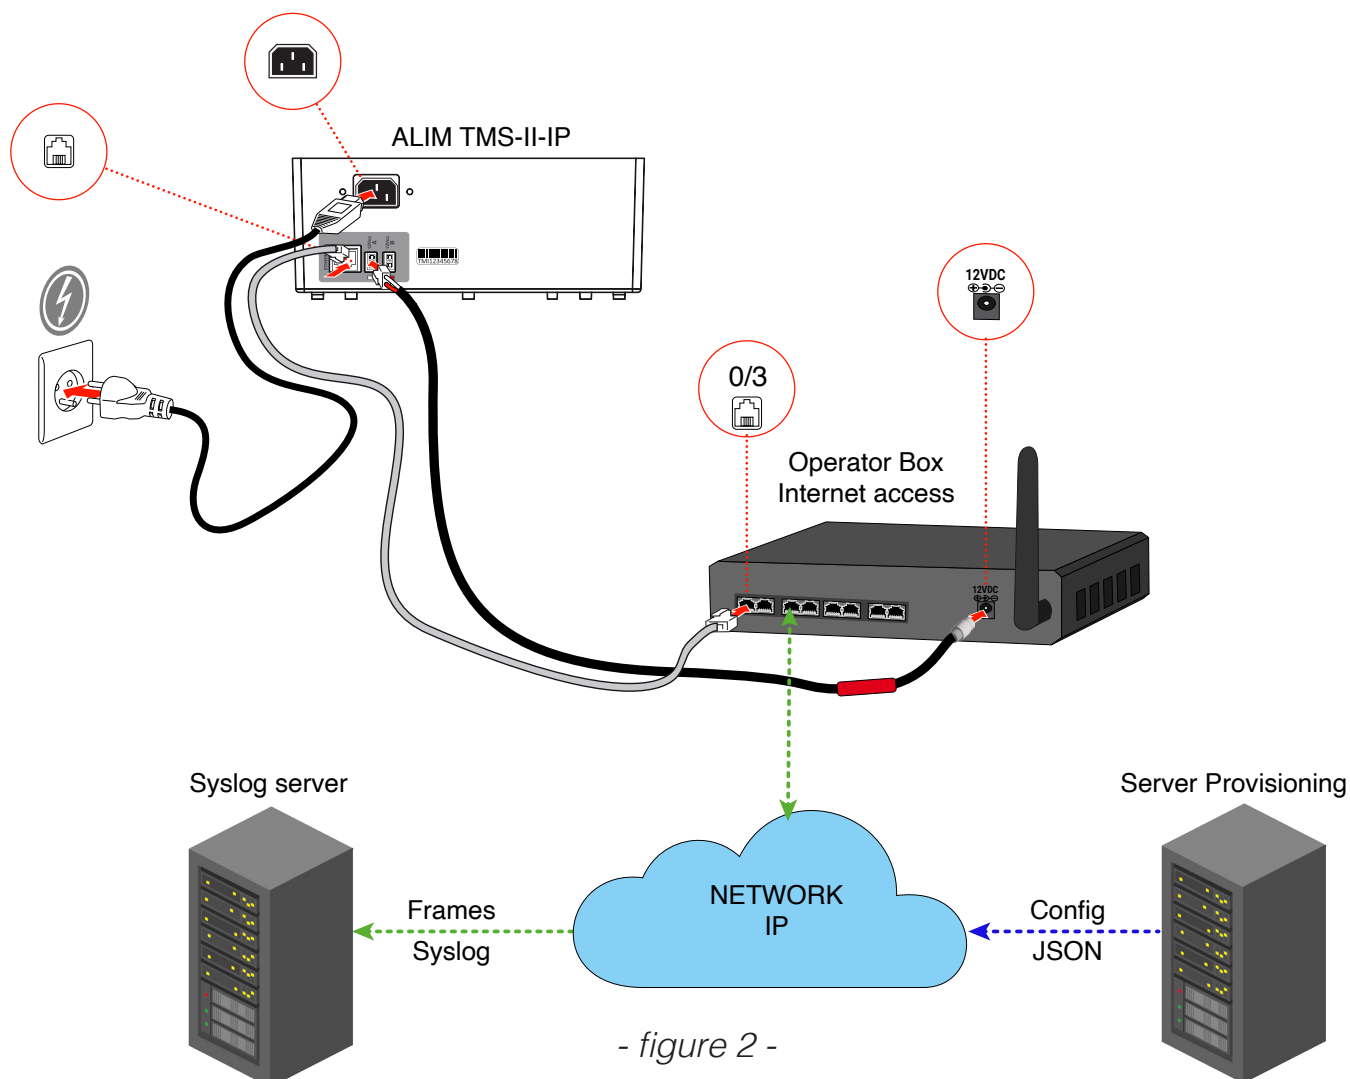

1. On commissioning, the TMS-II-IP power supply connects to the ANEP server of provisioning to retrieve its configuration
2. Transmission of its status (power supply + battery) to the Syslog server

a. DHCP

The TMS-II-IP works with a dynamic IP address assigned by the server.


b. STATIC IP ADDRESS

The TMS-II-IP ALIM works with a fixed IP address defined either by the user either by default (factory).


HTML ADMINISTRATION

PC CONNECTION

2 connection possibilities

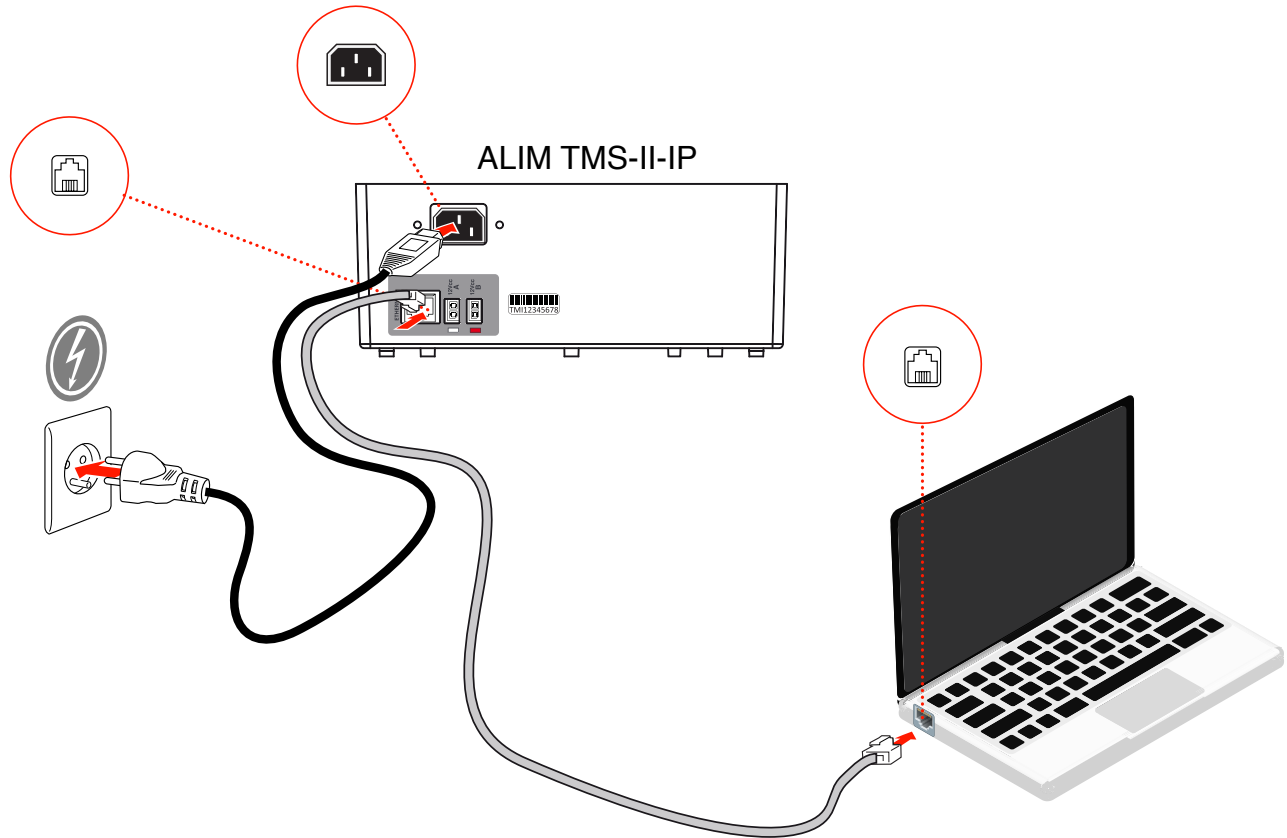

- figure 3 - Direct connection of a PC

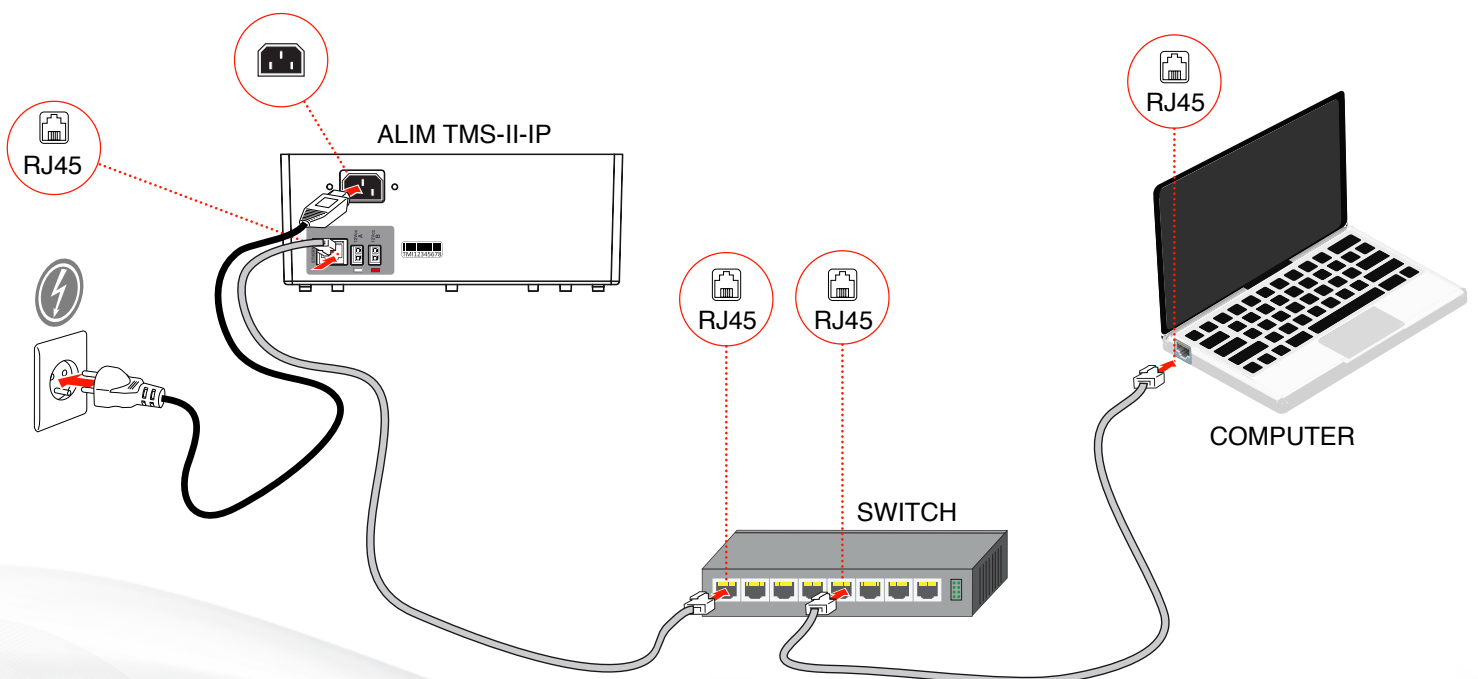

- figure 4 - Connecting a PC via a Switch

HTML ADMINISTRATION

HTML LOGIN

ALIM-TMS II-IP

CONNECTION

Login: admin

Password: admin (default)

Note : To reset the default password, see chapter "Reset button" (p.14)

HTML ADMIN PAGE

ALIM-TMS II-IP

Version : s918R100F
Mac address : XX-XX-XX-XX-XX-XX

☒ Static Mode

☒ Manual DNS

☒ Syslog Server

☒ Provisioning server

Change password Factory settings Save Undo

HTML ADMINISTRATION

FIELD DESCRIPTIONS:

IP addresses are in IPv4 format: xxx.xxx.xxx.xxx

STATIC MODE

If checked

- Static mode activated
- The IP address, Network mask and Gateway fields are active and editable

If unchecked (default)

- DHCP Mode Enabled
- The IP address, Network mask and Gateway fields are inactive

DNS

- **Preferred DNS:** Primary DNS server
- **Alternate DNS:** Secondary DNS server

SYSLOG SERVER

If checked

- Sending syslog frames to the customer's Syslog server or to the ONE425 router if it is connected
- The IP address, port and cyclic send fields are active and modifiable

If unchecked (default)

- No sending of syslog frames
- The IP address, port and cyclic send fields are inactive

Cyclic send (min.)

- Periodicity of sending Syslog frames
- Min value and max value = 1 Min and 3600 Max

Facilities

- Default: local0; (local0-local7)

PROVISIONING SERVER

If checked

- The configuration retrieved from the provisioning server contains the URL address of the Syslog server to which the ALIM TMS-II-IP must send Syslog frames
- Get Provisioning button is active
- The IP address field is active and editable

If unchecked (default)

- No power-on configuration recovery action
- Get Provisioning button is grayed out and disabled

HTML ADMINISTRATION

BUTTON DESCRIPTIONS :

CHANGE PASSWORD

Password change

- 1- Enter the current password
- 2- Entering the new password and confirming it
- 3- Click on **SAVE**: Save the new password, then return to the HTML administration page
- 4- Click on **UNDO**: Cancel the modifications, then return to the HTML administration page

GET PROVISIONING

Retrieving the config provided by the provisioning server

- 1- Force the recovery of the config
- 2- Display of the recovered config
- 3- Click on **SAVE**, to save and run the config
- 4- Click on **UNDO**, to cancel the modifications

FACTORY CONFIG

Display of the factory config (see next page)

- 1- Display of the factory config
- 2- Click on **SAVE**, to save and run the config
- 3- Click on **UNDO**, to cancel the modifications

SAVE

Saves and applies the values entered in the page

Note: Clicking on the SAVE button disconnects the IP connection before restarting it.

UNDO

Cancels the values entered in the page and displays the previous configuration

ADMINISTRATION HTML

FACTORY CONFIGURATION VALUES

Static Mode enabled

IP address : 192.168.0.20
Network mask : 255.255.255.0
Gateway : 192.168.0.254

Primary DNS : 8.8.8.8

Secondary DNS : 1.1.1.1

Syslog server enabled

IP address : syslog.anepanywhere.com
Port : 514 by default ; (0-65565)
Periodicity : 10 (min)
Facility : local0 by default ; (Min: local0 - Max: local7)

Provisioning server enabled

IP address : [Please contact us.](#)

IP-COMMUNICATION

LIST OF SYSLOG ALARMS

DESCRIPTION	
1	Test: TMS-II-IP test cannot be performed
2	Test: TMS-II-IP test passed
3	Test: TMS-II-IP test failed
4	No 230 Vac power supply The TMS-II-IP PSU is now powered by the battery
5	No 230 Vac power supply. The TMS-II-IP PSU is now powered by the battery but the battery level is insufficient
6	The TMS-II-IP PSU is powered by the 230 Vac mains and the daily battery test is correct
7	The TMS-II-IP PSU is powered by the 230 Vac mains and the daily battery test is "NO OK". The battery is either disconnected or needs to be replaced

TABLE OF STATES

ALTERNATING CURRENT (AC)	BATTERY
ON	OK
ON	KO
OFF	UP (charged)
OFF	DOWN (low)

TROUBLESHOOTING / FAQs

Condition	Causes	Solution
LED Power Management	Green off: No power supply 230 Vac power supply	Press the Test button to perform a battery test to determine the battery status (flashing green). At the end of the test the LED should be solid green.
LED Battery Management	LED off: the battery is dead.	Disconnect one terminal from the battery and measure the voltage with a multimeter.
	Green flashing battery voltage is below 12V	Disconnect the battery and charge it to 13V
LED IP Management	IP LED off	Check the network status and verify that the Ethernet cable is properly connected to the equipment.
	Orange IP LED steady	DHCP operating mode, the power supply is wired to an Ekinops router.
	Orange IP LED flashing fast	DHCP operating mode, power is wired to another product.
	Orange IP LED flashing fast	Operating mode FIXED IP address, waiting to join the provisioning server.
	Green IP LED flashing slowly	Successful access to the provisioning server, attempted transmission to the Syslog server.
Powe Supply Management	The two fuses F2 and F6 battery and 12V output are not present or out of order	Replace and respect the indicated values of the fuses. F2 : Radial 3.15A fast F6 : Radial 4A slow
	The F2 battery fuse is not present or out of order	The equipment works only on 230 Vac. Battery management not possible. Replace and respect the value of the value of the fuse. F2 : Radial 3.15A fast
	The fuse F6 output 12V is not present or out of order	The equipment works only on battery. Autonomy of 1 hour (depending on the battery charge level). Replace and respect the value of the value of the fuse. F6 : Radial 4A slow

NOTES

ANEP applies a method of continuous development, therefore, ANEP reserves the right to make changes and improvements to any product described in this document, without notice.

ANEP cannot under any circumstances be held liable for any loss of data, as well as any particular damage or incident, resulting from poor implementation or non-compliant use of the product.

The contents of this document are provided “as is”. No warranty of any form, express or implied, is made as to the accuracy, reliability, or content of the document. ANEP reserves the right to revise this document or withdraw it at any time without notice.

WARRANTY

This product is guaranteed for **3 years** from the date of invoicing of the product, with the exception of batteries and cells which are guaranteed for **6 months**.

However, this guarantee does not apply in the event of:

- Use that does not comply with the instructions in this manual.
- Deterioration from a cause external to the product (act of vandalism, fire, flood, storm, overvoltage...).
- Installation carried out by an unqualified installer not approved by ANEP.
- Modifications or repairs carried out by entities not approved by ANEP.
- Opening of the product by a non-ANEP approved person.



IMPORTANT

Particular care and rigor must be taken in the cabling and connection, in order to obtain the best sound results and optimal reliability of the product.

The equipment must be connected, installed and programmed according to the rules of the trade.

NOTES

[illegible]

THE AFTER SALES SERVICE IS PROVIDED BY

SAVTEL

4 bis rue de Paris 94470 Boissy-Saint-Léger

Tel : +33 1 45 98 34 44



Site internet : www.anepstore.com

